# AMAZER/AMAZER PLUS

fragrance diffuser product manual



## SPECIFICATIONS

## Plug and Play Bluetooth Control 4 Intensity Levels

ProductAmazer PlusSize $3.4" \ge 2.5" \ge 8.4"$ Volume4 fl ozCoverage1080 sf





## INSTALLATION



- 1. Unscrew the bottom cap
- 2. Fill bottle with fragrance
- 3. Screw the bottle in and the bottom cap
- 4. Plug in to base or outlet



- 1. Plug in power cord to base and outlet
- 2. Plug diffuser into base

**3.** Short press the button on base to choose light color. Long press to turn the LED light on and off. *Colors: Light blue/dark blue/light purple/pink* 

## **HOW TO OPERATE**



**NOTES** 1. The machine diffuses for 15 seconds for each grade. 2. Consumption may differ based on grade and oil.

## CLEANING DIFFUSER

To protect the life of your diffuser and ensure optimal performance, be sure to clean your diffuser when you refill the bottle with fragrance, change fragrances or you notice the atomization volume goes weak.

#### Steps to Clean:

- 1. Turn off diffuser
- 2. Unscrew lower cover and take out fragrance bottle
- 3. Soak fragrance bottle in alcohol for 5-10 minutes
- 4. Fill fragrance bottle with isopropyl alcohol, reattach to diffuser and turn on for 5-10 min
- 5. Dispose of alcohol, air out bottle and replace with fragrance

# 

- 1. Please keep the machine vertical. Tilt or lie flatly may cause the oil overflow. The efficiency of the machine may be affected.
- 2. Shall not modify, disassemble or repair the machine. If any failure happens to the machine, please contact our technical personnel.







## CONNECTING BLUETOOTH

Download the app for more convenience and control. \*Bluetooth connection is not compatible with Amazer Push



- 1. Turn on diffuser
- 2. Open Scent Marketing app on smart device
- 3. Locate diffuser (default name will appear)
- 4. Enter default password 8888
- 5. Customize your diffuser settings



To change default password (8888) to custom password, navigate to the ABOUT tab.

Set	About	
PCB version:	V1.00	
Equipment version:	V2.09	
App version:	2.4	
Change the password		

## CONNECTING BLUETOOTH

Custom schedule allows you to program multiple start/stop times, intensity levels, and days of operation

		al 🗢 🗖		11:05			al 🗢 💷)	
				$\leftarrow$				
Set		About		The s	start time	The end	l of time	
				03	59	00	28 29	
Name:				05	00	08	30 —	- Set Start/Stop time
Diffuser Nam	ie	-	<ul> <li>Custom name</li> </ul>	06	01	09	31 32	
Label: Entry Way		_	— Diffuser location	Repeat	Mon Thur Fi	Tue C	Wed Sun	– Days of operation
		+-	Add custom schedule	√ Gra	de		3 +	- Select intensity level
05:00 - 08:30 Every day			- Schedule ON/OFF	Custom Work Time(S) Stop Time(S)		ime(S)	Custom setting to adjust the amount	
09:00 - 12:00 Every day	Grade: 4				3 60 diffu	of secs the device diffuses and the amount of secs it		
					5			pauses.

For any questions about connecting your diffuser through bluetooth, please contact customerservice@azairscent.com

## TROUBLESHOOTING

For optimal performance and to avoid any clogging of your diffuser, only use essential oil blends from Phoenicia Essence or Arizona Air-Scent. These fragrances have been carefully developed specifically for our diffusers. Failure to do so may cause damage to your machine.

Always ensure your diffuser is kept in an upright position. Tilting of diffuser may cause oil to leak onto surface.

PROBLEM	POSSIBLE CAUSE	SOLUTION			
Device not diffusing	<ul> <li>Device is in "pause mode" in between cycles</li> <li>Faulty pump</li> </ul>	<ul> <li>Wait for diffuser to change to "working mode"</li> <li>Replace pump*</li> </ul>			
Device does not turn on	<ul> <li>Device not plugged in</li> <li>Faulty power adapter</li> <li>Faulty power source</li> </ul>	Check if device is plugged in     Replace power supply adapter*     Check power source			
Can hear device working but fragrance mist is not visible and cannot smell fragrance	<ul> <li>Diffuser core is clogged</li> <li>Device is in "pause mode" in between cycles</li> </ul>	<ul> <li>Replace fragrance with alcohol and through diffuser for 5 min</li> <li>If that does not work, replace diffuser core*</li> <li>Wait for diffuser to change to "working mode"</li> </ul>			
Fragrance oil is leaking	<ul> <li>Fragrance bottle is loose</li> <li>Diffuser is not vertical</li> </ul>	<ul> <li>Ensure fragrance bottle is fastened straight and tight</li> <li>Ensure diffuser is standing upright</li> </ul>			

\*For replacement parts, please contact customerservice@azairscent.com