EXPERT MINI/EXO MINI

fragrance diffuser product manual



SPECIFICATIONS

Battery Powered

Bluetooth Control

10 Intensity Levels

Product Exo Mini/Expert Mini

Size 5.5" x 2.3" x 6.3"

Volume 3.3 fl oz


Coverage 232 sf


Power Battery D-Size x2 (not included)

USB 5V (USB cable not included)






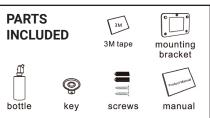


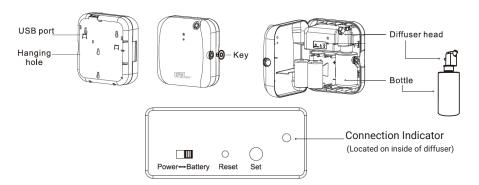

INSTALLATION

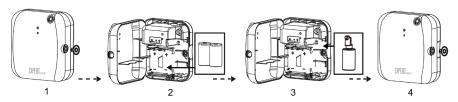

- 1. Insert key to side of diffuser and twist to OPEN. Press fixed button on the top and push forward.
- Choose "Power Mode" or "Battery Mode". Plug in USB or insert battery. (If connecting to power for the first time, please wait about 12 minutes to let machine fully charge.)
- 3. Tightly connect the atomizer head and the fragrance bottle, and install them into the diffuser.
- 4. Insert key to side of diffuser and twist to CLOSE for locking.

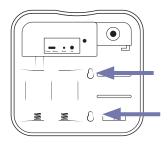

Locate circular holes on the inside of the unit and drill the provided screws through the unit into the wall.

We do not recommend using the included mounting bracket.

*For extra security we recommend using the hardware included to mount your device.

**DO NOT USE 3M TAPE ONLY.

HOW TO OPERATE



Bluetooth Indicator

LIGHT IS ON: diffuser is connected

LIGHT IS FLASHING: diffuser is open for connection

LIGHT IS OFF: diffuser is not connected.

Once diffuser is connected to app, you can control settings such as schedule, times and intensity.

See section below "Connecting to App"

CONCENTRATION & CONSUMPTION

Grade	G1	G2	G3	G4	G5
Intervals (min)	15m	13.5m	12m	10.5m	9m
Grade	G6	G 7	G8	G9	G10
Intervals (min)	7.5m	6m	4.5m	3m	1.5m

2. Consumption may differ based on grade and oil.

- 1. The machine diffuses for 5 seconds for each grade.

CLEANING DIFFUSER

To protect the life of your diffuser and ensure optimal performance, be sure to clean your diffuser at least **once a month** or when you **refill the bottle with fragrance, change fragrances or you notice the atomization volume goes weak.**

Steps to Clean:

- 1. Remove fragrance bottle and diffuser head
- 2. Unscrew fragrance bottle from diffuser head
- 3. Fill 15% of the fragrance bottle with isopropyl alcohol, reattach to diffuser and diffuse 5-10 times
- 4. Dispose of alcohol, air out the diffuser head and bottle and replace with fragrance



NARNING

- Please keep the machine vertical. If tilted or laid flat, it may cause the oil to overflow. The
 efficiency of the machine may be affected. Keep out of reach of children.
- Shall not modify, disassemble or repair the machine. If any failure happens to the machine, please contact our technical personnel.
- 3. When diffuser is first used or hasn't been used for more than 7 days, the control board needs to be reset. Please insert batteries or plug in and wait for 1-2 minutes. The machine will turn back on automatically.

CONNECTING BLUETOOTH

Download the app for more convenience and control.


*Bluetooth connection is not compatible with Amazer Push







- 1. Turn on diffuser
- 2. Open Phoenica Essence app on smart device
- 3. Locate diffuser (default name will appear)
- 4. Enter default password 8888
- 5. Customize your diffuser settings

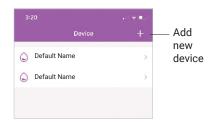

To change default password (8888) to custom password, navigate to the ABOUT tab.








CONNECTING BLUETOOTH

Custom schedule allows you to program multiple start/stop times, intensity levels, and days of operation

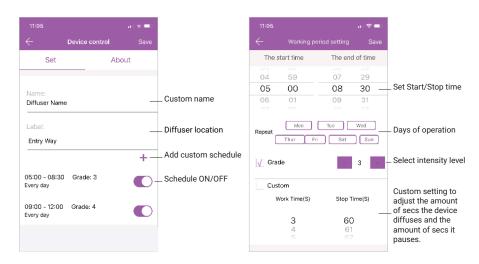

For any questions about connecting your diffuser through bluetooth, please contact **customerservice@phoeniciaessence.com**

TROUBLESHOOTING

For optimal performance and to avoid any clogging of your diffuser, only use essential oil blends from Phoenicia Essence or Arizona Air-Scent. These fragrances have been carefully developed specifically for our diffusers. Failure to do so may cause damage to your machine.

Always ensure your diffuser is kept in an upright position. Tilting of diffuser may cause oil to leak onto surface.

PROBLEM	POSSIBLE CAUSE	SOLUTION	
Device not diffusing	Device is in "pause mode" in between cycles Faulty pump	Wait for diffuser to change to "working mode" Replace pump*	
Device does not turn on	Dead batteries Faulty power source	Replace (2) size D batteries Check power source	
Can hear device working but fragrance mist is low, not visible and cannot smell fragrance	Diffuser core is clogged Device is in "pause mode" in between cycles Damaged or loose gasket Loose tube	Replace fragrance with alcohol and through diffuser for 5 min If that does not work, replace diffuser core* Wait for diffuser to change to "working mode" Replace damaged gasket* Tighten tubing	
Fragrance oil is leaking	Fragrance bottle is loose Diffuser is not vertical	Ensure fragrance bottle is fastened straight and tight Ensure diffuser is standing upright	
Device emitting loud, unusual noise	Air pump is loose Air pump is damaged	Re-tighten the pump Replace air pump*	

*For replacement parts, please contact customerservice@phoeniciaessence.com

PLACEMENT RECOMMENDATIONS

- Choose a location where the fragrance can utilize natural airflow.
- Mount your diffuser at lease 6.5 ft 7 ft up the wall, out of the reach of children and pets using the provided hardware.
- It is best to place away from air vents for optimal performance.
- For larger rooms, place your diffuser in a centralized location for more even fragrance diffusion.
- Smaller rooms will require less output and diffusers can be placed in a convenient location.
- Keep the diffuser in an open area. Do not place directly behind furniture or anything that can block the flow of fragrance.



fragrances to remember